

Tennis Net Installation Instructions

Unroll the Tennis net with the small cable crimped loop end (not the adjustable end) at the cable hook post (not winder post). Secure the small looped cable over the hook on the outside of the post then over the top of the post (sitting in the groove) as shown in the picture below.

At the winder end of the system remove the screw (Philips screw driver) holding the top of the post in place and then remove the top.

Thread the net cable over the pulley in the cap.

To do this you will need to remove the small U Bolt that is on the end of the net cable as it will not be required for these posts, this can be done simply by undoing the two bolts with a crescent.

There will now be an amount of excess cable. This excess cable needs to be cut to the required length. **IT IS VERY IMPORTANT YOU DO NOT CUT THE CABLE TOO SHORT.** To make sure you get the length right before you cut the cable you need to follow these steps;

- Check that the cable attachment end (non winder end) is still hooked on correctly
- Make sure you have threaded the cable through the cap at the winder end
- Pull the net firmly so it is tight
- Line the cable up on the outside of the post, note the point adjacent to where the cable will be threaded through the hole in the internal winder
- Add an extra 10cm/4inches and mark this point on the cable
- To make sure the mark is correct repeat the above steps



It is far better to be conservative with the amount of cable cut, you can always cut more off after the first cut if the cable is too long but nothing can be done with a short cable. When you are sure your mark is correct and you are sure you will have enough cable to thread through the internal winder once the cable is cut you are ready to cut the cable. This can be easily done with wire cutters, a hacksaw or pliers.



Once the cable is cut, thread the cable through the hole in the internal winder inside the post. Start winding the handle on the post and make sure the cable stays hooked through the winder, once you are confident of this put the cap back on the post and tighten the net until it is firm but not fully tight.

Following this, thread the twine provided through the eyelets on the sideband of the net to the post lacing bar attachments on both posts. Put the centre band over the net in the centre of the system and secure it to the eyelet in the ground. You can now tighten the net to desired tension by winding the winder handle. The standard height of a Tennis Net is 3ft/91.4cm in the middle (above the centre band) and 3ft6/107cm at each post.

If you have any questions regarding installation or if any of the instructions are not clear to you, please contact us phone: 092949172/021764202 or email: kevin@mayfieldsports.co.nz